

JumpR Slate 10K™ User Manual

 
Specifications

Model: JU-SLATE-10K
 Battery Cell: Lithium-ion Polymer
 Power Capacity: 10000mAh(37Wh)
 Recharging Cycle: 500 cycles
 Output A: 5V/2.4A
 Output B: 5V/2.4A
 Input: 5V/0.5~2.0A(self-adapt)
 Weight: 0.77lb (350g)
 Dimensions: 8.39 x 5.47 x 0.26 inch (213.0 x 139.6 x 6.7 mm)
 Operating Temperature: 32°F ~ 104°F (0°C ~ 40°C)
 Storage Temperature: 14°F ~ 122°F (-10°C ~ 50°C)


How to Charge

Charge the JumpR Slate 10K with a micro USB cable from any associated power source. During charging the LED Battery Indicator will flash. Once charged, four solid LED lights will indicate the JumpR Slate 10K is fully charged.

To charge your electronic devices using the included USB cable simply connect that cable to the USB interface on the JumpR Slate 10K then connect the cable to the desired device; once connected press the power button to begin charging.



 (If the JumpR Slate 10K doesn't begin charging your device immediately, please make sure the Slate is charged before reconnecting)

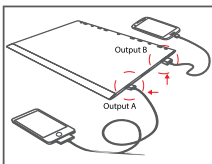

Output A:
Specialized output for iDevices, also compatible with all USB enabled devices.

Output B:
General devices output.

Battery Status Indication

The Indicator status while being charged


- Indicator is on
- Indicator is off
- ※ Indicator is blinking

Remaining battery capacity while JumpR Slate 10K not in use

Battery Status Indicator	Battery Level
※○○○	0%~25%
●※○○	25%~50%
●●※○	50%~75%
●●●※	Over 75%
●●●●	100%

Battery capacity while JumpR Slate 10K in charge

Battery Status Indicator	Battery Level
※○○○(blinking every second)	0%~3%
※○○○(blinking every 5 seconds)	3%~25%
※※○○	25%~50%
※※※○	50%~75%
※※※※	75%~100%

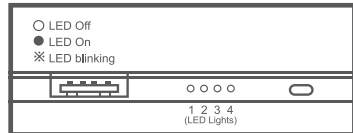 

Other EnerPlex Gear: see the latest at www.goenerplex.com

Warranty:

1 year limited Warranty
 Please refer to goenerplex.com for more information