




# LIFELYNK X - SM3.6kWLL

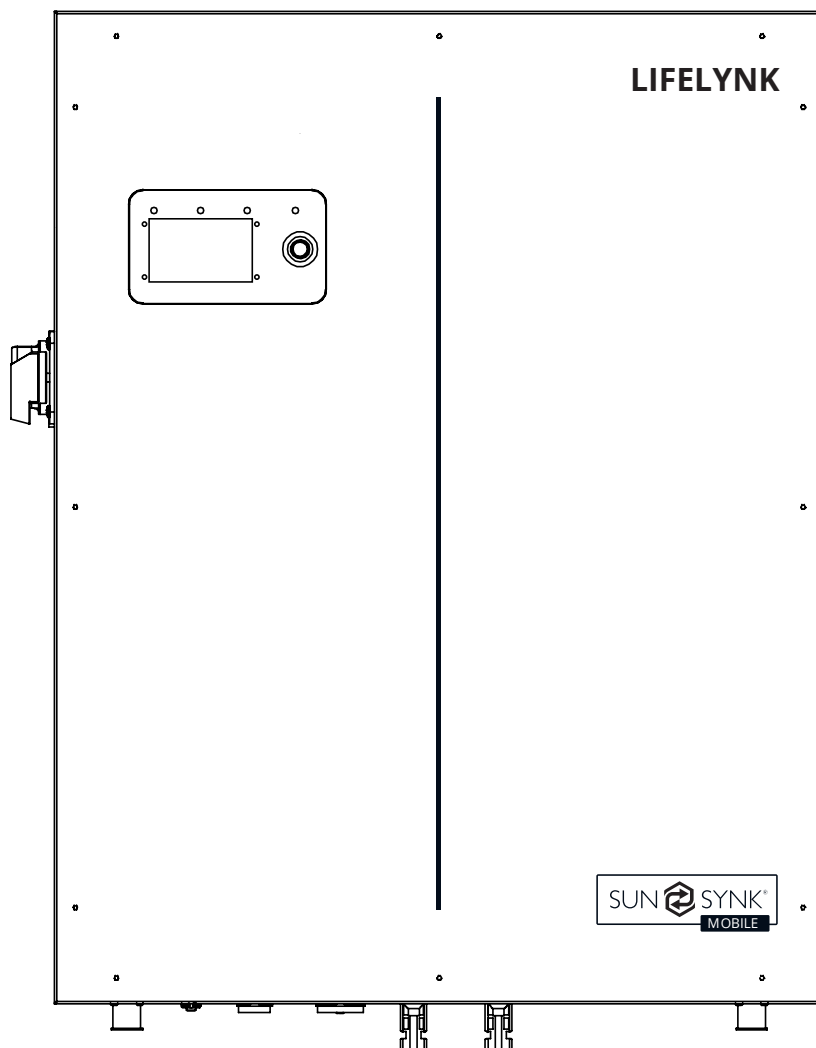

## USER MANUAL UK/EU

[www.sunsynkmobile.com](http://www.sunsynkmobile.com) / [sales@sunsynkmobile.com](mailto:sales@sunsynkmobile.com)



# INDEX

---

|                                           |           |                                            |           |
|-------------------------------------------|-----------|--------------------------------------------|-----------|
| <b>SAFETY</b>                             | <b>3</b>  | <b>OPERATION</b>                           | <b>20</b> |
| General Safety Information                | 3         | System Flow                                | 20        |
| Safety Instructions                       | 3         | Switching On / Off                         | 21        |
| Symbols in the Manual                     | 4         | Home Screen                                | 21        |
| Symbols in the Product                    | 4         | Home Settings                              | 22        |
| Product Disposal                          | 6         | Basic Settings                             | 22        |
|                                           |           | Language Settings                          | 23        |
| <b>PRODUCT INTRODUCTION</b>               | <b>6</b>  | Grid Mode Settings                         | 24        |
|                                           |           | Work Mode Settings                         | 25        |
| <b>BOX CONTENTS</b>                       | <b>7</b>  | System Logger                              | 26        |
|                                           |           | Advance Settings                           | 27        |
| <b>TECHNICAL SPECIFICATION</b>            | <b>7</b>  | Grid Settings                              | 28        |
|                                           |           | Battery Settings                           | 28        |
| <b>INSTALLATION</b>                       | <b>9</b>  | System Settings                            | 29        |
| Selecting the Mounting Area               | 9         | Export Control                             | 30        |
| Mounting the Inverter                     | 10        | Export Sell to Grid                        | 30        |
| Turning on the Batteries                  | 11        | Charge from AC                             | 32        |
| Flow Diagram                              | 12        | Earth Neutral Bond                         | 32        |
| Connecting to the Mains / Grid            | 12        | Night Power Saving                         | 33        |
| Wiring the PV Panels                      | 12        | Setting Details                            | 34        |
| CT Coil and Load Power Settings           | 13        | Fault Codes                                | 37        |
| Parallel Operation                        | 15        | <b>COMMISSIONING</b>                       | <b>39</b> |
| External Battery and Parallel Connections | 16        | Startup / Shutdown Procedure               | 39        |
|                                           |           | Information for Commissioning the Inverter | 40        |
|                                           |           | GFDI Fault                                 | 41        |
| <b>LCD DISPLAY SCREEN</b>                 | <b>18</b> | <b>MAINTENANCE</b>                         | <b>41</b> |
| <b>FACTORY SETTINGS</b>                   | <b>19</b> | <b>APPENDIX A</b>                          | <b>41</b> |
| <b>BATTERY COMPATIBILITY</b>              | <b>19</b> |                                            |           |

## General Safety Information

- This device should only be used in accordance with the instructions within this manual and in compliance with local, regional and national laws and regulations. Only allow this device to be installed, operated, maintained or repaired by other person(s) who have also read and understood this manual. Ensure the manual is included with this device should it be passed to a third party.
- **DO NOT** allow minors, untrained personnel, or person(s) suffering from a physical or mental impairment that would affect their ability to follow this manual, install, maintain or repair this device.
- Any untrained personnel who might get near this device while it is in operation **MUST** be informed that it is dangerous and instructed carefully on how to avoid injury.

## Safety Instructions



### WARNING

#### HIGH LIFE RISK DUE TO FIRE OR ELECTROCUTION.

The Lifelynk X can only be installed by a qualified licensed electrical contractor. This is not a DIY product.

#### Ensure to follow the safety warnings listed below:

- Be sure to read this manual thoroughly before installation.
- Do not attempt to install the inverter by yourself. Installation work must be carried out in compliance with national wiring standards and by suitably qualified personnel only.
- Do not turn on the power until all installation work is complete.
- Do not disassemble the inverter. If you need to repair or maintenance, contact a professional service centre.
- Always use an individual power supply line protected by a circuit breaker and operating on all wires with a distance between contacts of at least 3mm for this unit.
- The unit must be correctly grounded and the supply line must be equipped with a suitable breaker and RCD to protect people.
- Disconnect all wires before performing any maintenance or cleaning to reduce the risk of electric shock.
- The unit is not explosion-proof, so it should not be installed in an explosive atmosphere.
- Never touch electrical components immediately after the power supply has been turned off since the system can still have residual energy, so electric shock may occur. Therefore, after turning off the power, always wait 5 minutes before touching electrical components.
- This unit contains no user-serviceable parts. Always consult an authorised contractor for repairs.

## Symbols in the Manual



This symbol indicates information that if ignored, could result in personal injury, physical damage or even death due to incorrect handling.



If this label is situated next to the MC4 connections it indicates that the voltage must be equal across both sets of MC4 connections.

If this label is situated next to the positive and negative battery connections it indicates that for paralleling, only Sunsynk batteries are recommended.


## Symbols in the Product



Risk of burn.



Keep the equipment well-ventilated.

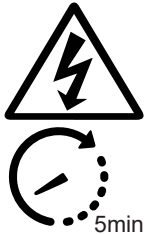

Risk of electric shock.  
DO NOT touch the terminal or remove the shell within 5 minutes after disconnecting all power.



The UKCA marking is used for products placed on the market in Great Britain (England, Scotland and Wales). The UKCA marking applies to most products for which the CE marking could be used.



This product's batteries contain an explosive, self-reactive material that could blow up when heated.



Do not disassemble or alter the battery in any way. Do not strike or puncture the battery.



The Battery is heavy and can cause injury if not handled safely.



ONLY qualified personnel should install or perform maintenance work on the units.



Be careful when touching the inverter! It is an electrical product with risk of electric shock and heating.



Warranty Void if Seal is Broken.



Do not place near open fire or incinerate. Do not use near heaters or hot temperature sources.



Keep the product out of reach of children!



Do not stand on.






 
 
 

Avoid unsuitable shoes for installing and operating the inverter.



Do not step or put any objects onto the battery.




Do not drop, deform, or impact the battery.
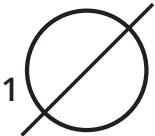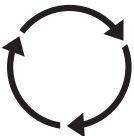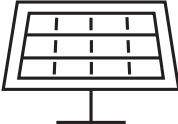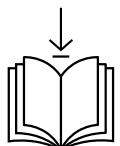
|                                                                                     |                                                                                                                                                                      |                                                                                     |                                                                                                                                                                                                               |
|-------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|    | Single Phase.                                                                                                                                                        |    | Three Phase.                                                                                                                                                                                                  |
|    | Protective Conductor Terminal or Earth Ground Terminal.                                                                                                              |    | Rechargeable.                                                                                                                                                                                                 |
|    | Do not submerge the battery in water or expose it to moisture or liquid.                                                                                             |    | Keep out of reach of children, animals, and insects.                                                                                                                                                          |
|    | Do not expose the product to sunlight.                                                                                                                               |    | Inverter DC to AC.                                                                                                                                                                                            |
|    | Li-ion Battery.                                                                                                                                                      |    | Net Weight in Kilograms.                                                                                                                                                                                      |
|    | <b>BATTERY INPUT</b><br>Battery Discharge Voltage, Battery Discharge Current, Input Voltage Type, Battery Discharge Power.                                           |    | <b>PV INPUT</b><br>PV Input Voltage, Number of MPPT's, MPPT Input Current & Max PV ISC.                                                                                                                       |
|   | Direct Current.                                                                                                                                                      |   | Indicates that this product is recyclable.                                                                                                                                                                    |
|  | <b>AC OUTPUT</b><br>Output Voltage, Input Voltage Type, Ac Output Rated Current, Max AC Current, Output Frequency, Max AC ISC, Power Factor & AC Output Rated Power. |  | <b>CONTINUOUS OUTPUT CURRENT</b><br>Maximum Continuous Output Current, Output Frequency and Voltage, & AUX (programmable AC output on battery SOC).                                                           |
|  | Charging.                                                                                                                                                            |  | Discharging.                                                                                                                                                                                                  |
|  | Follow the indicated temperatures.                                                                                                                                   |  | <b>TEMPERATURE</b><br>Ambient, Min & Max.                                                                                                                                                                     |
|  | <b>MANUAL DOWNLOAD</b><br>Download the latest version of the instruction manual by scanning the QR code.                                                             |  | <b>WARRANTY REGISTRATION</b><br>Scan the QR code to access our website and sign up for the manufacturer's warranty.                                                                                           |
|  | Do not dispose the device, accessories, and packaging with regular waste. Follow local ordinances or contact the manufacturer for disposal guidance.                 |  | Refer to the operating instructions. Contact the supplier within 24 hours if there is anything wrong. In case of leakage contact with eyes or skin, immediately clean with water and seek help from a doctor. |



 CE mark is attached to the solar inverter to verify that the unit follows the provisions of the European Low Voltage and EMC Directives.



Max. PV input current.



Smoke Detector.



Smart Meter.

## Product Disposal

### **DO NOT dispose of this product with domestic waste!**

Electrical devices should be disposed of in accordance with regional directives on electronic and / or electronic-waste disposal. In case of further questions, please consult your supplier. In some cases, the supplier can take care of disposal.

## PRODUCT INTRODUCTION

The Lifelynk X is a highly efficient power management tool that allows the user to hit those 'parity' targets by managing power-flow from multiple sources such as solar, mains power (grid) and generators, and then effectively storing and releasing power as and when utilities require.

### **INTERACTIVE**

- Easy and simple to understand LCD display.
- Supporting Wi-Fi or GSM monitoring.
- Built-in MPPT trackers.
- Smart settable 3-stage MPPT charging for optimised battery performance.

### **COMPATIBLE**

- Compatible with main electrical grid voltages.
- 230V single-phase, pure sine wave inverter.

### **CONFIGURABLE**

- Fully programmable controller.
- Programmable supply priority for battery or grid.
- Programmable multiple operation modes: on-grid / off-grid & UPS.
- Configurable battery charging - current / voltage based on the application.

### **SECURE**

- Overload / over-temperature / short-circuit protection.
- Smart battery charger design for optimized battery protection.
- Limiting function installed to prevent excess power overflow to grid.

### **APPLICATIONS**

- Power shedding (home / office / factory).
- UPS (Uninterrupted Power Supply).
- Remote locations with solar.
- Building sites.
- Telecommunication.


# BOX CONTENTS

## This box contains:

- Lifelynk X (main unit)
- Screw pack
- CT Coil (2 pin AERO - female connector) (3m cable)
- 2 x MC4 connectors
- Wall mounting bracket
- Data logger (Sunsynk Wi-Fi)
- 1x3 pin AC Load connector (female)
- 1x3 pin AC Grid connector (male)

## TECHNICAL SPECIFICATION


- Pure sine wave inverter with a maximum input power of 4.5kW.
- High nominal output power of 3.6 kW that can run several appliances.
- With batteries, the power capacity is 3840Wh.
- MPPT charge controller feature.
- Bi-directional inverter that can rapidly charge its internal batteries in just one hour.

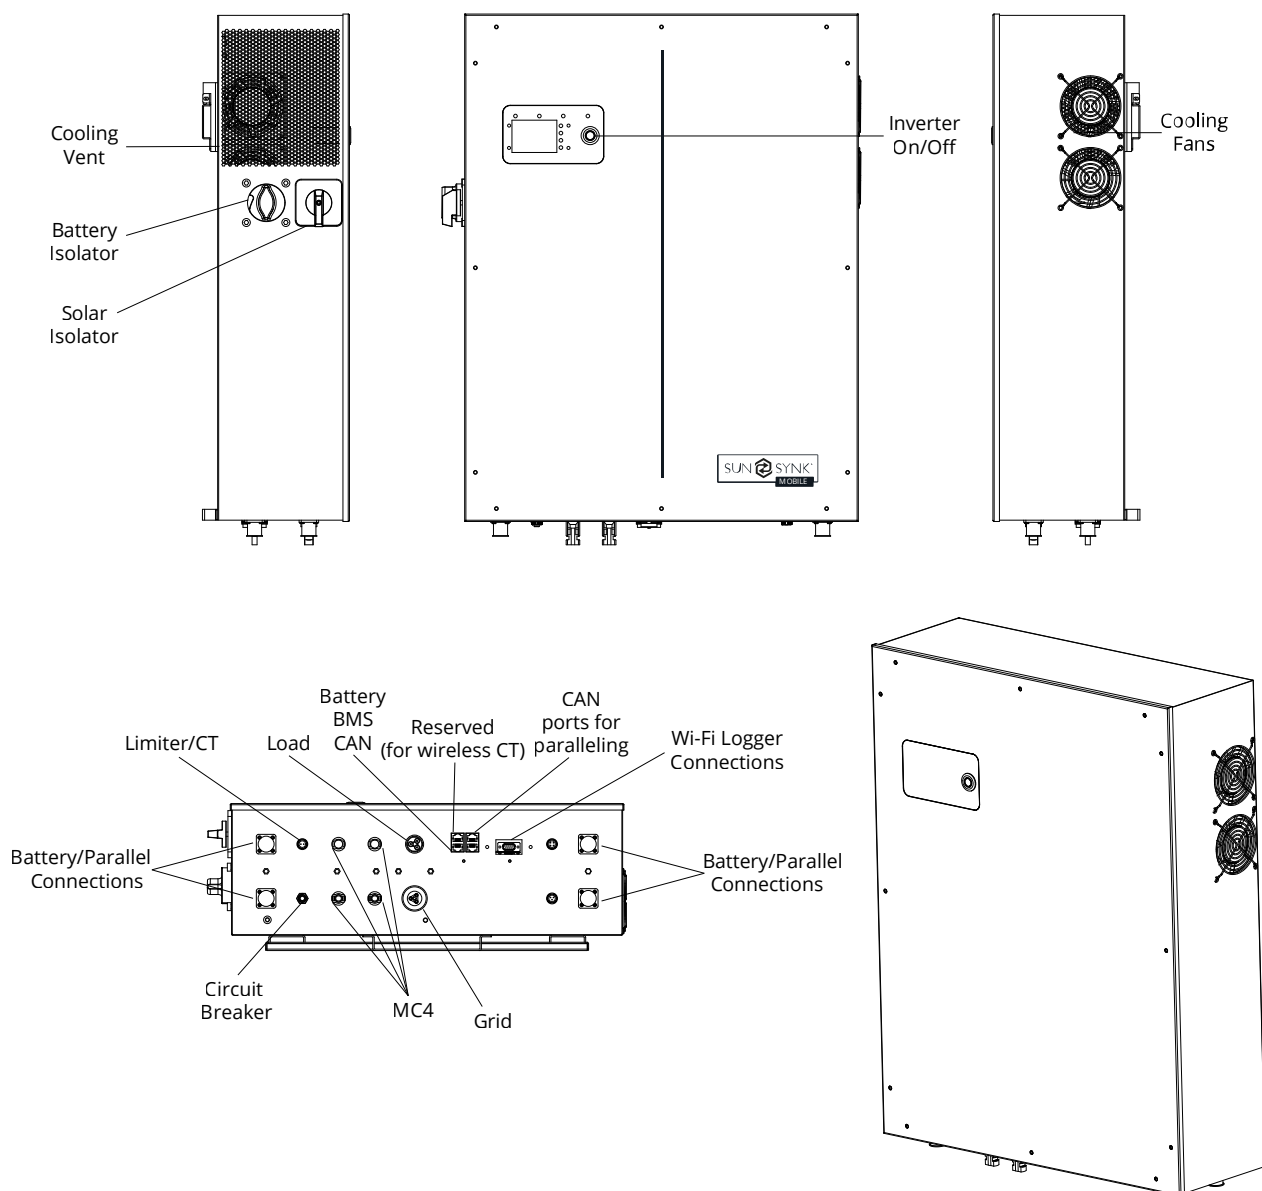

| Model                                       | Lifelynk X                                       |
|---------------------------------------------|--------------------------------------------------|
| <b>PV Input Data</b>                        |                                                  |
| Max. PV Power                               | 4500W                                            |
| Max. PV Input Voltage                       | 500V                                             |
| MPPT Voltage Range                          | 120-450V                                         |
| Start-up Voltage                            | 150V                                             |
| Max. PV Current                             | 12A (total current of the two MC4 sets combined) |
| <b>AC Output / Input Data</b>               |                                                  |
| Maximum Input Power                         | 3600W                                            |
| Nominal Input / Output Power                | 3600W                                            |
| Max. Input / Output Apparent Power          | 3600VA                                           |
| Nominal Voltage                             | 230VAC                                           |
| Max. Input / Output Current                 | 16A                                              |
| Max. Continuous / Rated Current             | 16Aa.c.                                          |
| Nominal Frequency                           | 50Hz                                             |
| Power Factor Range                          | 0.8 Leading ~ 0.8 Lagging                        |
| <b>Standalone Data</b>                      |                                                  |
| Nominal Output Power                        | 3600W                                            |
| Nominal Output AC Voltage                   | 230VAC (Configurable)                            |
| Nominal Output AC Frequency                 | 50Hz (Configurable)                              |
| Output THD (Resistor load)                  | <3%                                              |
| <b>Battery Data</b>                         |                                                  |
| Battery Voltage Range                       | 40V~58V                                          |
| Max. Charging Current / Discharging Current | 60A/80A                                          |
| Battery Type                                | LiFePO4                                          |
| Power of Each Battery                       | 3840Wh                                           |
| Number of Batteries                         | 1 (Installed)                                    |
| Ingress Protection                          | IP20                                             |
| Protective Class                            | Class I                                          |
| <b>Efficiency</b>                           |                                                  |
| Max. Efficiency                             | 97.6%                                            |
| Max. Battery to Load Efficiency             | 94.0%                                            |
| Europe Efficiency                           | 97.0%                                            |
| MPPT Efficiency                             | 99.9%                                            |
| <b>Operating Temperature Ranges</b>         |                                                  |
| Inverter                                    | -20°C ~ +50°C (>35°C Derating)                   |
| Battery Charging                            | 0°C ~ +50°C                                      |
| Battery Discharging                         | -20°C ~ +50°C                                    |

# INSTALLATION

## Selecting the Mounting Area

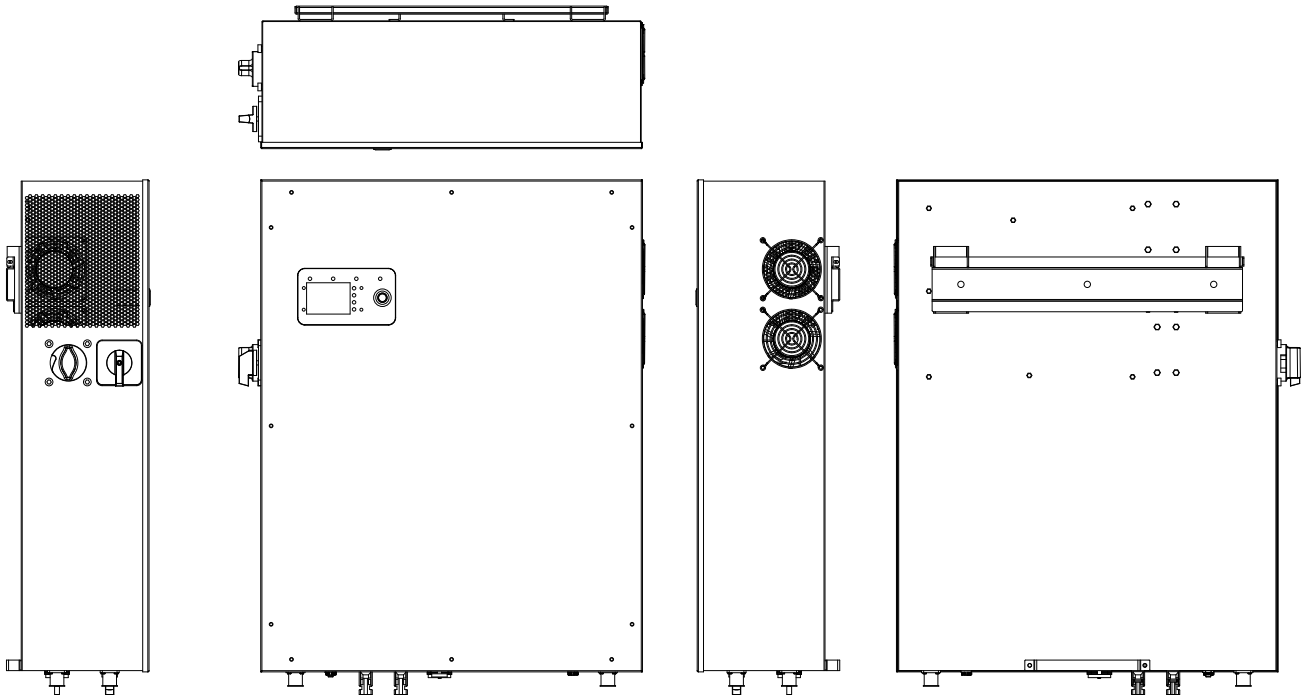

### DO NOT install in the following areas:


- Areas with high salt content, such as the marine environment. It will deteriorate the metal parts and possibly lead to water / dampness penetrating the unit.
- Areas filled with mineral oil or containing splashed oil or steam such as in kitchens. This will deteriorate plastic parts of the unit, causing those parts to fail or allow water /damp to penetrate the unit.
- Areas that generate substances that adversely affect the equipment, such as sulphuric gas, chlorine gas, acid, or alkali. These can cause the copper pipes and brazed joints to corrode and fail to conduct electricity reliably.
- Areas that can cause combustible gas to leak, which contains suspended carbon-fibre, flammable dust or volatile inflammability such as paint thinner or gasoline.
- Areas where there may be gas leaks and where gas may settle around the unit, as this is a fire risk.
- Areas where animals may urinate on the unit or ammonia may be generated.
- High altitude areas (over 4000 metres above sea level).
- Environments where precipitation or humidity are above 95%.
- Areas where the air circulation is too low.

### ALSO CONSIDER:

- Installing the indoor unit, outdoor unit, power supply cable, transmission cable and remote control cable at least 1 metre away from any television or radio receiver. This will prevent TV reception interference or radio noise. This will also prevent radio signal interference from external units that might interfere with the Wi-Fi or GSM monitoring.
- If children may approach the unit, take preventive measures so that they cannot reach and touch the unit.
- Install the indoor unit on the wall where the height from the floor is higher than 1600mm.
- For proper heat dissipation, allow a clearance of approximately 500mm to the side, 500mm above and below the unit and 1000mm to the front of the unit.

## Mounting the Inverter

- Select a location that provides adequate support for the weight of the inverter.
- Install this inverter so that the LCD screen is eye-level for easy operation.
- An appropriate ambient temperature lies between  $-20 \sim 50^{\circ}\text{C}$  for optimal operation. Battery charging temperature range lies between  $0^{\circ}\text{C} \sim 50^{\circ}\text{C}$ .
- Ensure other objects and surfaces are outside of the recommended spaces (500mm each side / above and below / front) to guarantee heat dissipation and easy access to the wiring / cabling.

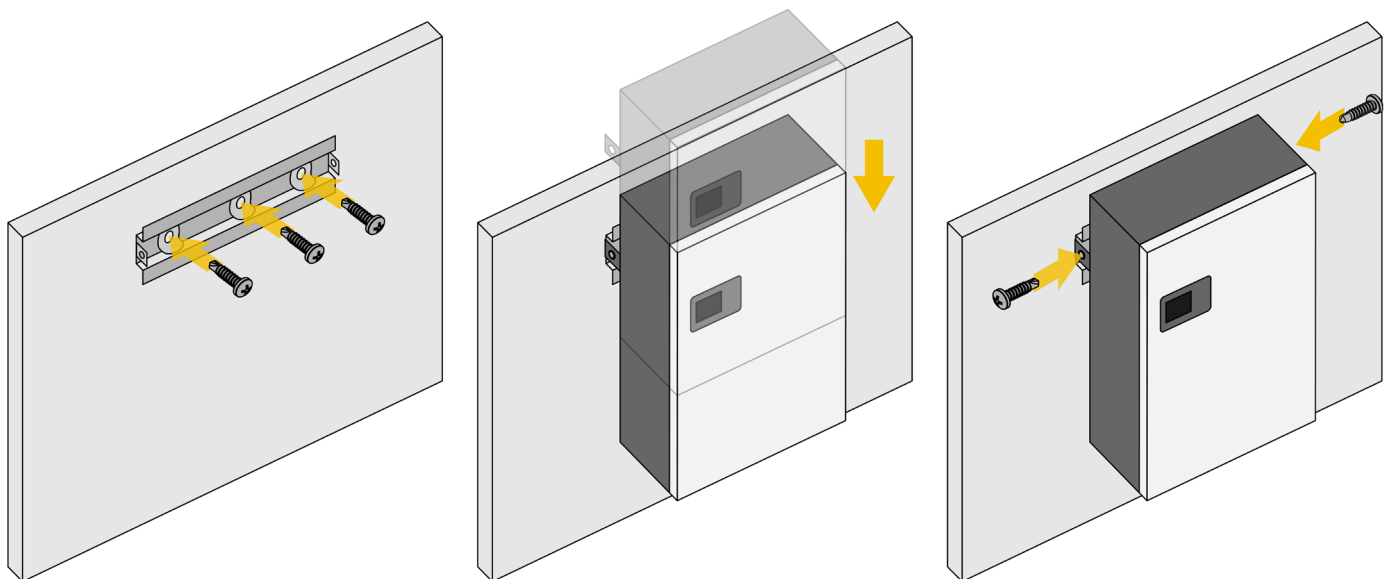




## CAUTION

### Risk of Injury (Heavy Object)

Remember that this inverter is heavy, so users must be careful in handling the unit during installation especially when mounting or removing from a wall.

## Turning on the Batteries

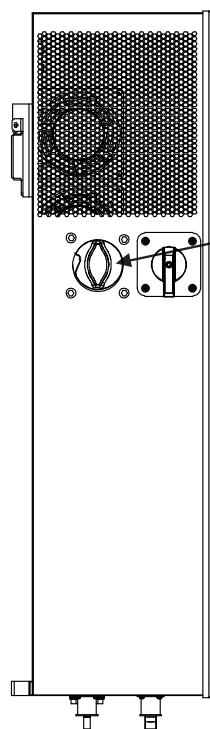


Turn the battery isolation switch  
to turn on the batteries.



## CAUTION

Setting a power limit higher than maximum will damage the battery fuse.

## Flow Diagram

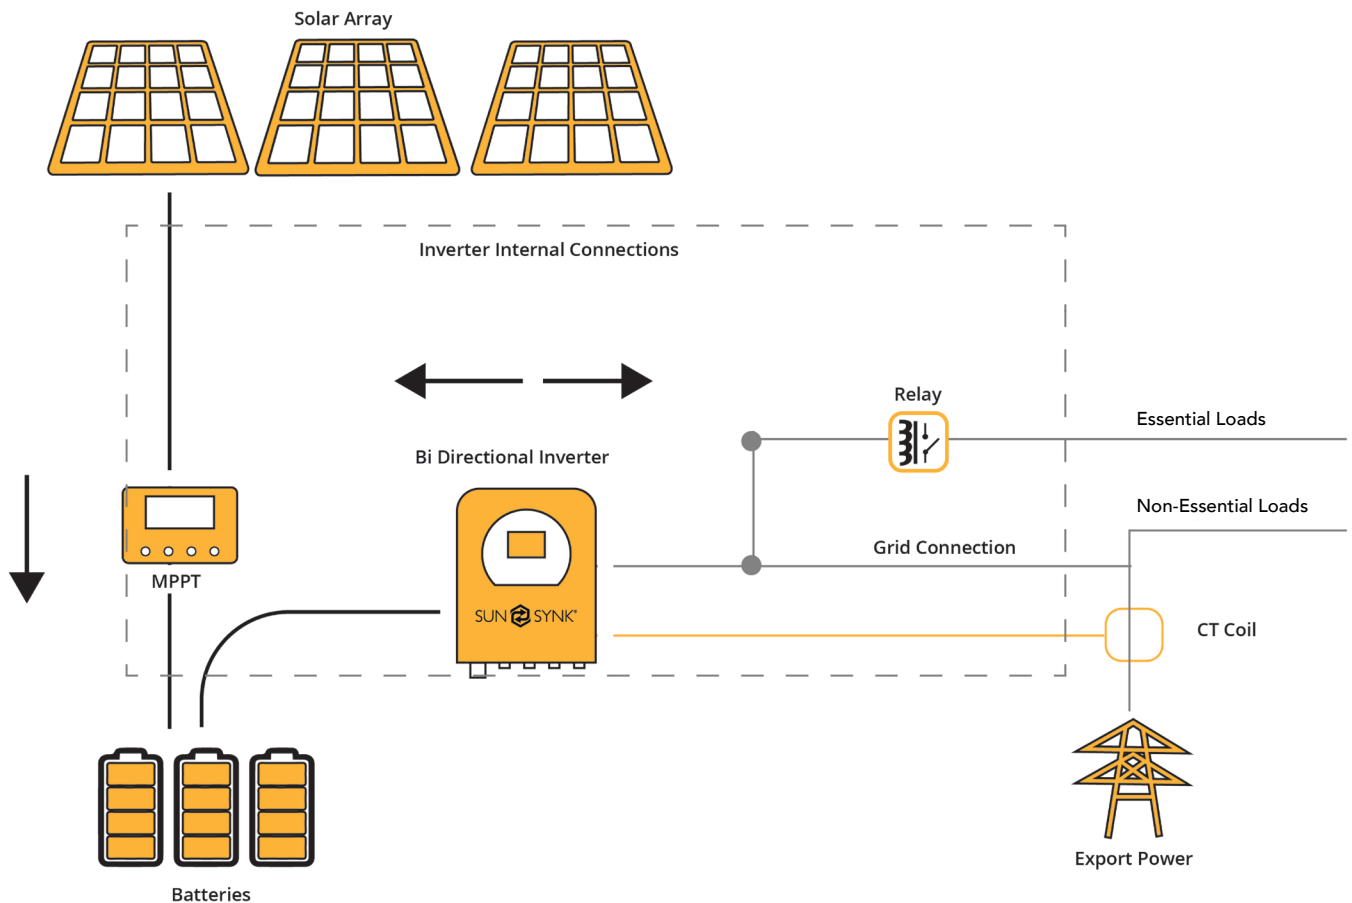


## Connecting to the Mains / Grid

1. Connect the Lifelynk X Hybrid Inverter to the electrical grid via the *grid ports*, using a suitable RCD and a 20A fuse on the consumer board.
2. Now, using a 3mm cable, connect only the essential loads to the *load ports* (output) to a secondary consumer board, considering the maximum limit of 3.6 kW.
3. Ensure the main consumer unit and the secondary consumer unit are correctly grounded to the Lifelynk X.

## Wiring the PV Panels

- The Lifelynk X Hybrid Inverter has an MPPT controller with a maximum input current of 16A.
- Please do not connect two PV sets with different voltages to the MC4 connectors. This can damage the PV set, causing the system to malfunction.
- Before connecting to PV modules, install a separate DC circuit breaker between the inverter and PV array.
- To avoid any malfunction, **DO NOT** connect any PV modules with possible current leakage to the inverter. For example, grounded PV modules will cause current leakage to the inverter.
- Also, the open-circuit voltage (Voc) of the PV modules does not exceed the maximum input voltage of the inverter. Also, the Voc of the PV array should be higher than the minimum starting voltage of the inverter.
- Connect the PV panels into the MC4 connectors.


## CT Coil and Load Power Settings

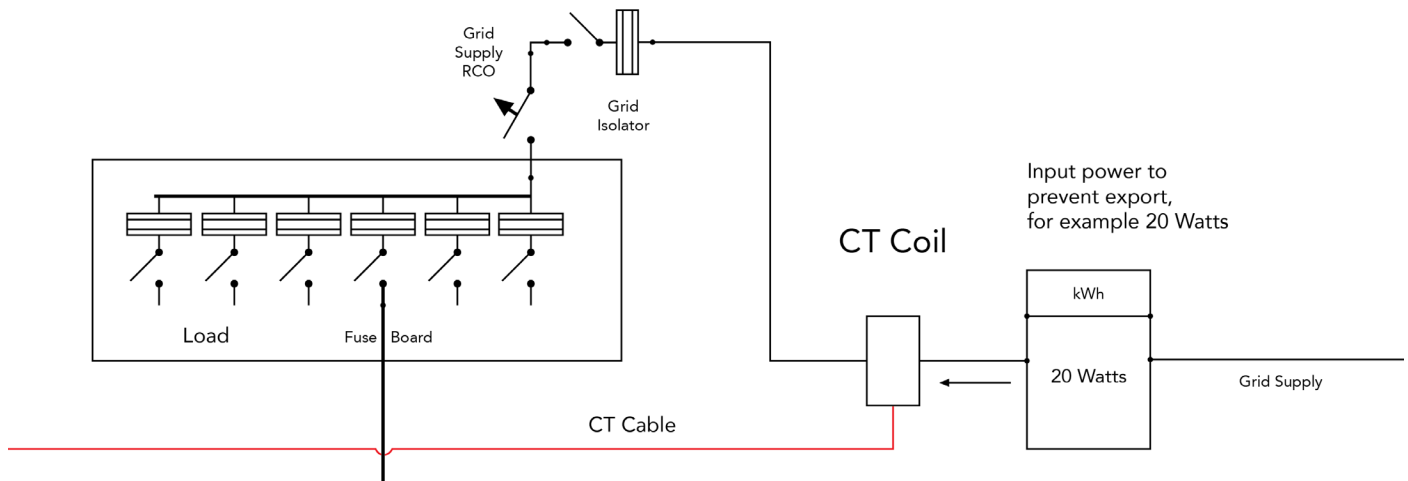

The CT coil is one of the most important parts of the Lifelynk X. This device reduces the power of the inverter to prevent feeding power to the grid. This is also known as zero export.

- Fit the coil (sensor) around the live cable on the main fuse feeding the building and run the cable back to the inverter. This cable can be extended up to an extra 10m using a similar cable.
- Connect the other end of the CT coil into the inverter terminals marked as *CT coil*.

Fit around positive cable feeding the building BETWEEN the meter and main fuse.

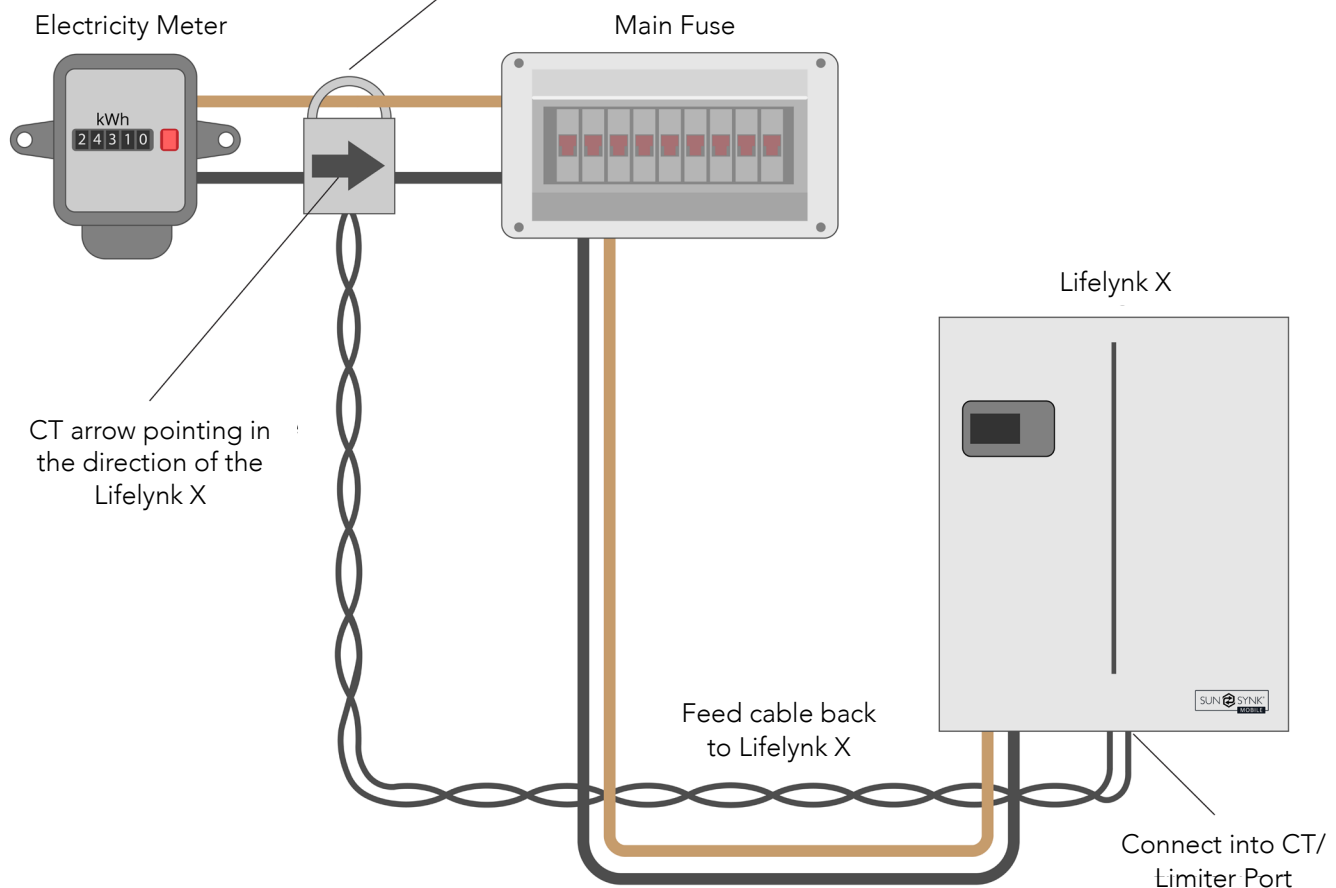

You can access the *CT Coil Screen* directly from the *Home Screen* by pressing the Home/Back button:

| SUN  SYNK                                                  |                         |
|---------------------------------------------------------------------------------------------------------------------------------------------|-------------------------|
| CT Power<br><b>0W</b>                                                                                                                       | Load Power<br><b>0W</b> |
| Work Mode: Standalone<br>Input Trickle Feed: 30W<br>Export Control: Zero Export<br>Earth Neutral Bond: Enable<br>Night Power Saving: Enable |                         |

You can access the Internal Battery Pack page by pressing the Home/Back button again:

| SUN  SYNK |               |
|--------------------------------------------------------------------------------------------|---------------|
| Internal Battery Pack                                                                      |               |
| Capacity: 75Ah                                                                             | SOC: 64%      |
| Voltage: 53.2V                                                                             | Current: 32A  |
| Charge Voltage Limit: 57.6V                                                                |               |
| Discharge Voltage Limit: 45.0V                                                             |               |
| Charge Current Limit: 37A                                                                  |               |
| Discharge Current Limit: 75A                                                               |               |
| Temp: 34.8°C                                                                               | Alarm: 0x0000 |

You can access the External Battery Pack page by pressing the Home/Back button again:

| SN: XXXXXXXXXXXX                                                                             |               |
|----------------------------------------------------------------------------------------------|---------------|
| SUN  SYNK |               |
| External Battery Pack                                                                        |               |
| Capacity: 75Ah                                                                               | SOC: 65%      |
| Voltage: 53.4V                                                                               | Current: 30A  |
| Charge Voltage Limit: 57.6V                                                                  |               |
| Discharge Voltage Limit: 45.0V                                                               |               |
| Charge Current Limit: 37A                                                                    |               |
| Discharge Current Limit: 75A                                                                 |               |
| Temp: 31.2°C                                                                                 | Alarm: 0x0000 |

## Parallel Operation

In order to connect Lifelynk inverters to operate in parallel, you need to set up the work mode configuration for each the inverter. Basically, you have to set which inverter will be the master and which will be the slaves, and then make the connections described in section 5.9 (External Battery and Parallel Connections).

| Basic Settings |            |
|----------------|------------|
| Set Time       | 15:16      |
| Set Date       | 19-05-2023 |
| Backlight      | On         |
| Work Mode      | Master     |
| SOC/Voltage    | Voltage    |
| Factory Reset  | No         |

| Basic Settings |            |
|----------------|------------|
| Set Time       | 15:16      |
| Set Date       | 19-05-2023 |
| Backlight      | On         |
| Work Mode      | Slave 02   |
| SOC/Voltage    | Voltage    |
| Factory Reset  | No         |



### WARNING

To ensure the proper functioning of the parallel operation, it is important first to establish the work mode for both the Master and Slave inverters and then make the necessary wiring connections.


If you make the connection prior to changing the work mode, an F15 error will be displayed on the Fault Codes page. In the event of this error, please maintain the connection and proceed to the settings to modify the work mode as presented above, and wait approximately 3-4 minutes. After that, the device should return to its normal working condition, with the error cleared.

# External Battery and Parallel Connections


Inverter Unit: 1 External Battery Number: 1




Inverter Unit: 1 External Battery Number: 2

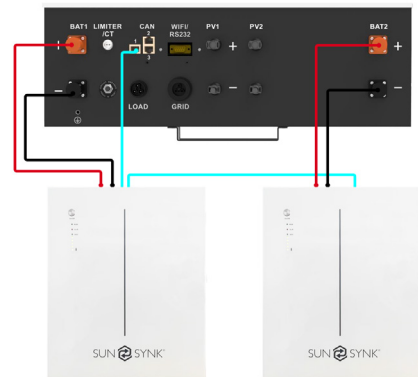

Inverter Unit: 2 External Battery Number: 1

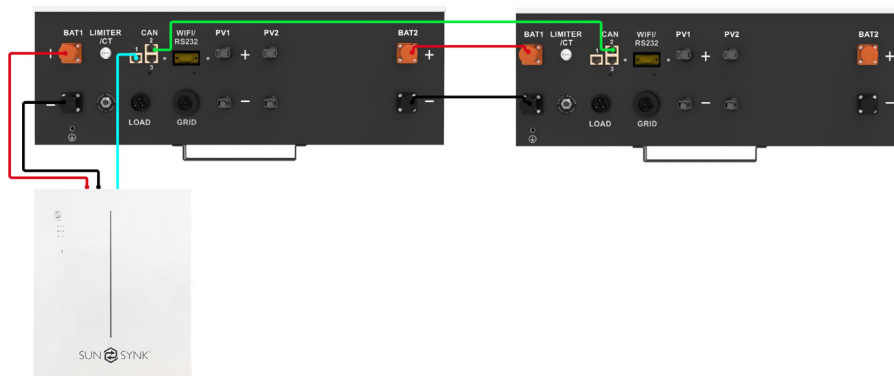

Inverter Unit: 2 External Battery Number: 2

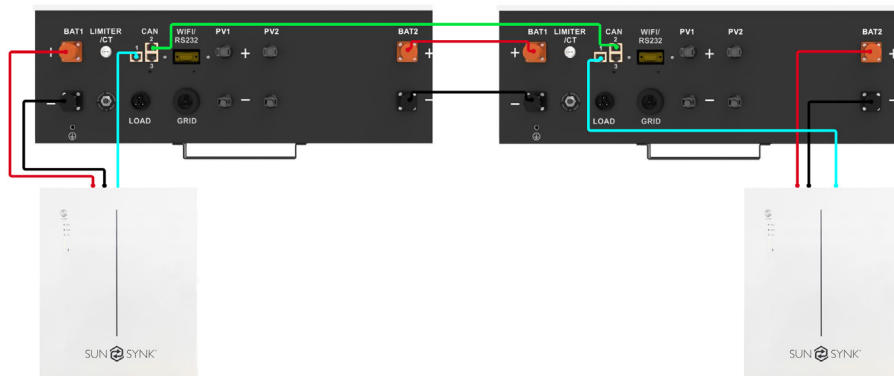


Inverter Unit: 3 External Battery Number: 1




Inverter Unit: 3 External Battery Number: 2




Inverter Unit: 2 External Battery Number: 1  
(Shows CT Coil Connection + Master&Slave)

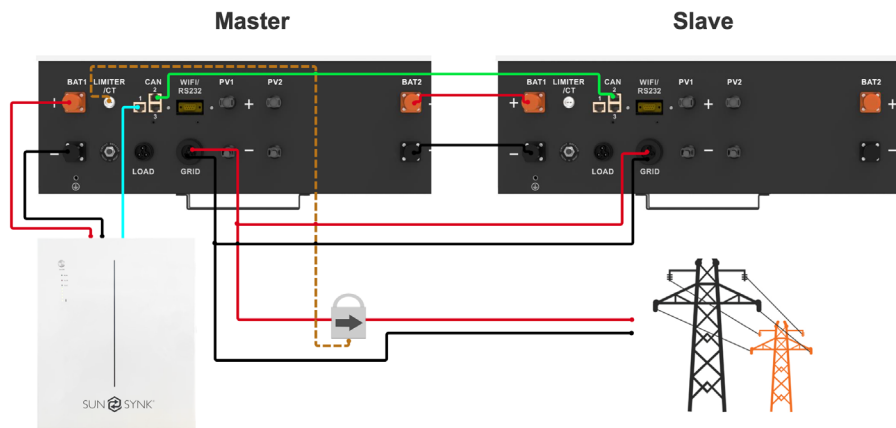

Inverter Unit: 2 External Battery Number: 2  
(Shows Batteries connected in parallel)

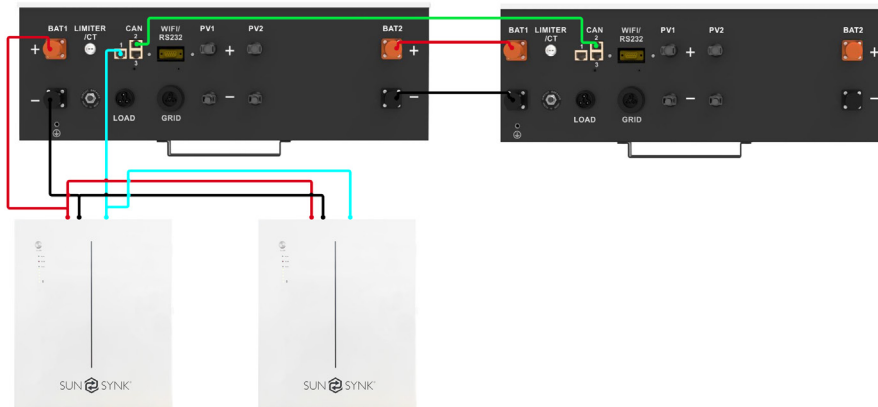


Inverter Unit: 3 External Battery Number: 6  
(Show External Batteries can be installed into each inverter)

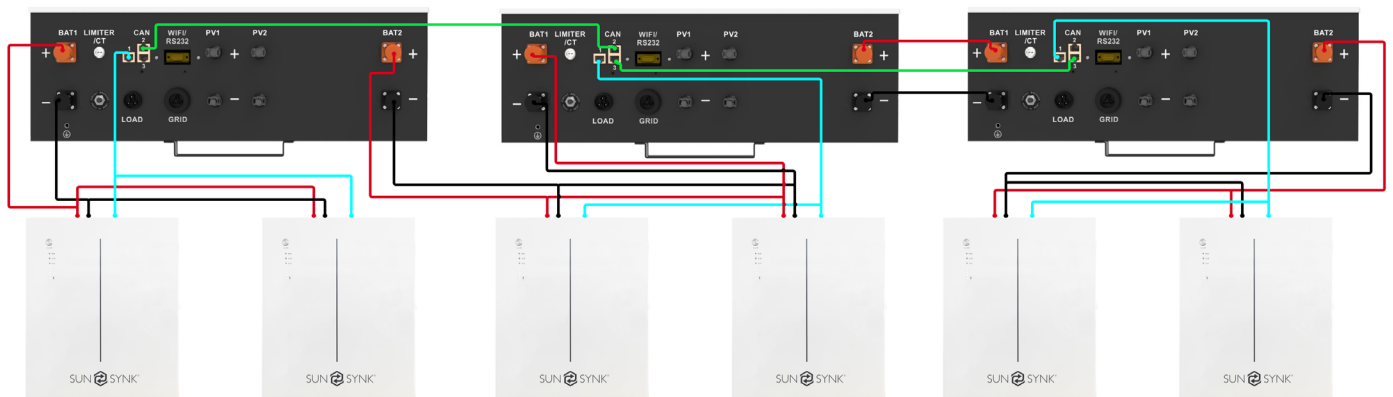

## LCD DISPLAY SCREEN

The LCD display screen is situated on the front of the Lifelynk X, this is where you can control and operate the system.

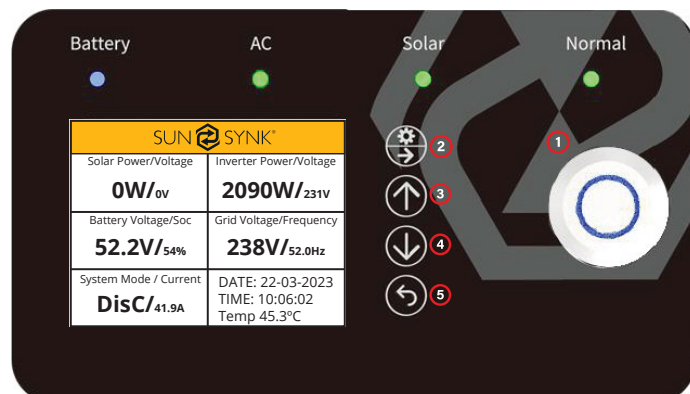

1. **Power** - to turn the system on / off.
2. **Settings / Select** - to operate the settings menu & to select.
3. **Up** - to navigate up.
4. **Down** - to navigate down.
5. **Home / Back** - to go back to the home menu & to navigate backwards.

| TYPE    | INDICATION | DESCRIPTION          |
|---------|------------|----------------------|
| BATTERY | GREEN      | CHARGING             |
|         | BLUE       | DISCHARGING          |
| AC      | GREEN      | AC CONNECTED         |
|         | OFF        | AC OFF               |
| SOLAR   | GREEN      | SOLAR ON             |
|         | OFF        | SOLAR OFF            |
| NORMAL  | GREEN      | INVERTER RUNNING     |
|         | RED        | SYSTEM FAULT         |
|         | OFF        | INVERTER NOT RUNNING |

## FACTORY SETTINGS

| Battery Settings          |       | Default Setting |                 |   |
|---------------------------|-------|-----------------|-----------------|---|
| Low Battery Cut Off       |       | 45.0V           |                 |   |
| Reboot Voltage            |       | 50.0V           |                 |   |
| Maximum Charge            |       | 40A             |                 |   |
| Charge from AC            |       | YES             |                 |   |
| Float Charge Voltage      |       | 56.0V           |                 |   |
| Active                    |       | ON              |                 |   |
| System Configuration      |       | Default Setting |                 |   |
| Maximum Discharge Current |       | 70A             |                 |   |
| Maximum Battery Voltage   |       | 56.0V           |                 |   |
| Import Trickle Feed       |       | 0030W           |                 |   |
| Export Control            |       | Zero Export     |                 |   |
| Earth Neutral Bond        |       | Enable          |                 |   |
| Night Power Saving        |       | Enable          |                 |   |
| Grid Settings             |       | Default Setting |                 |   |
| Maximum Grid Voltage      |       | 253V            |                 |   |
| Minimum Grid Voltage      |       | 195.5V          |                 |   |
| Maximum Grid Frequency    |       | 52.0HZ          |                 |   |
| Minimum Grid Frequency    |       | 47.5HZ          |                 |   |
| System Controller         |       |                 | Default Setting |   |
| 00:00                     | 6:00  | 2000W           | 52.0V           | Y |
| 6:00                      | 12:00 | 2000W           | 52.0V           | Y |
| 12:00                     | 18:00 | 2000W           | 52.0V           | Y |
| 18:00                     | 23:59 | 2000W           | 52.0V           | Y |


## BATTERY COMPATIBILITY

The following batteries are compatible with all Sunsynk Mobile Lifelynk Inverters:

- SUN-BATT-5.32
- SUNSYNK-L5.1
- L051069-A

# OPERATION

## System Flow

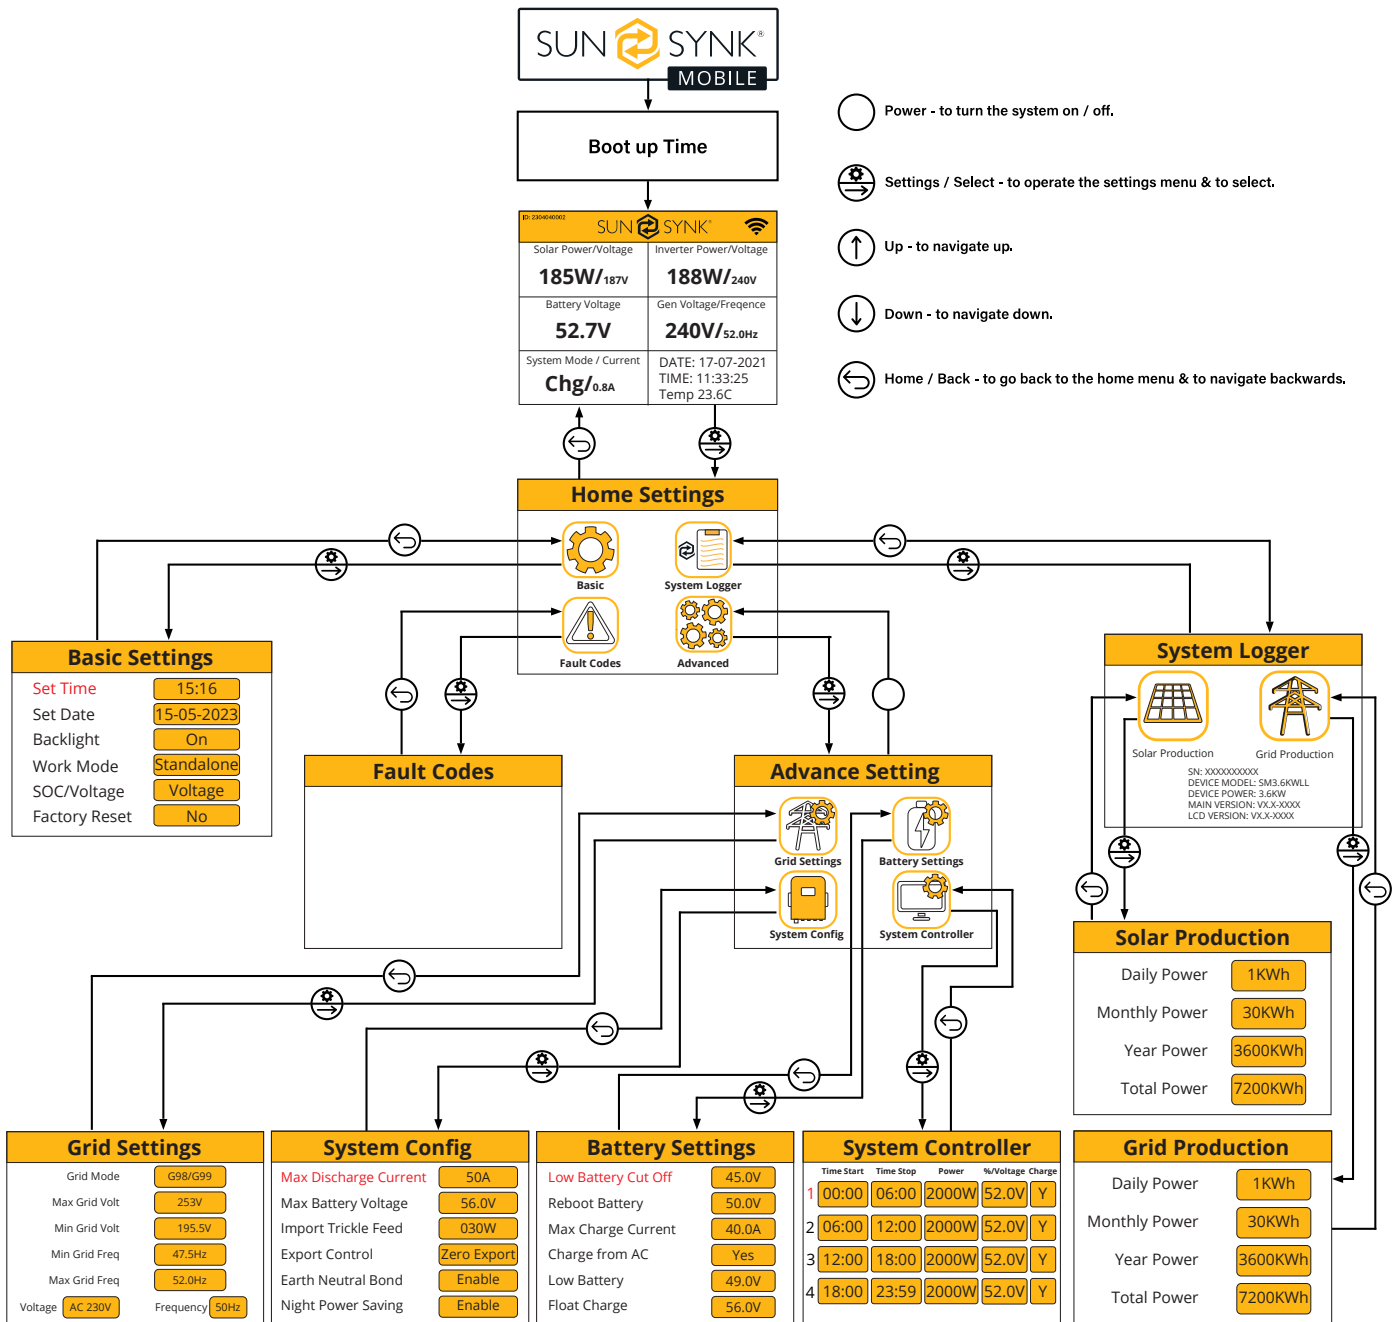

## Switching On / Off

Once the inverter has been correctly installed and the batteries are connected, press the *on / off button* (located on the front of the case) to turn on the system.

## Home Screen

| SUN  SYNK® |                                                   |
|---------------------------------------------------------------------------------------------|---------------------------------------------------|
| Solar Power/Voltage<br><b>0W/0V</b>                                                         | Inverter Power/Voltage<br><b>2090W/231V</b>       |
| Battery Voltage/Soc<br><b>52.2V/54%</b>                                                     | Grid Voltage/Frequency<br><b>238V/52.0Hz</b>      |
| System Mode / Current<br><b>DisC/41.9A</b>                                                  | DATE: 22-03-2023<br>TIME: 10:06:02<br>Temp 45.3°C |

### What does this page display?

Solar MPPT Input Power

Battery Voltage

System Status

Inverter Current Power

Grid Voltage and Frequency

Date, Time and Temperature


### What you can do from this page

If you press the select button you can navigate to the *basic setup menu*

If Sunsynk Connect has been connected, the WI-FI icon appears

Access the CT screen by pressing the Home/Back button

Home Settings

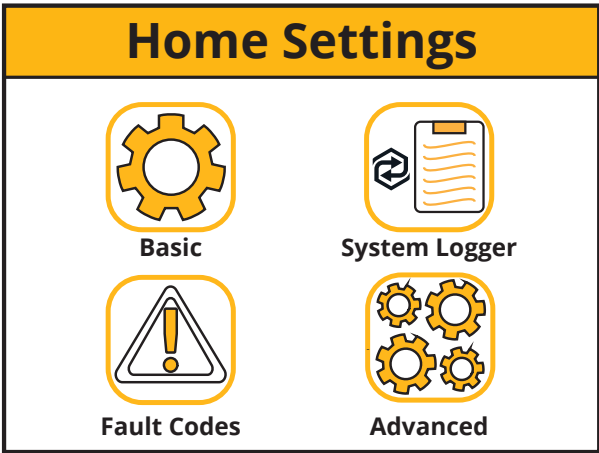

What does this page display?

- Basic setting icon
- System logger icon
- Fault codes icon
- Advanced settings icon

What you can do from this page

You can navigate through the functions by clicking on each icon

Basic Settings

Basic Settings

Set Time

15:16

Set Date

15-05-2023

Backlight

On

Work Mode

Standalone

SOC/Voltage

SOC

Factory Reset

No

Basic Settings

Set Time

15:16

Set Date

15-05-2023

Backlight

On

Work Mode

Standalone

SOC/Voltage

Voltage

Factory Reset

No

What does this page display?

- Time
- Date
- Backlight on / off
- Work Mode
- SOC/Voltage
- Reset

### What you can do from this page

Set the system's time

Set the system's date

Set backlight

Set the workmode

Set the system SOC/Voltage

Reset to factory default settings

After changing the settings, do not forget to click *save settings*.

**Basic Settings**

Save Settings?

YES

NO

## Language Settings

Change the language settings via the "Basic Settings" page by pressing the "Factory Reset" button. Then a password input page will be shown. The default password is "1234".

**Basic Settings**

|               |            |
|---------------|------------|
| Set Time      | 15:16      |
| Set Date      | 15-05-2023 |
| Backlight     | On         |
| Work Mode     | Standalone |
| SOC/Voltage   | SOC        |
| Factory Reset | No         |

SUN  SYNK®

Please Input the Password


\*\*\*\*

Then select the language according to your country or region by swiping right.






### Grid Mode Settings

Change the language settings via the “Basic Settings” page by pressing the “Factory Reset” button. Then a password input page will be shown. The default password is “1234”.

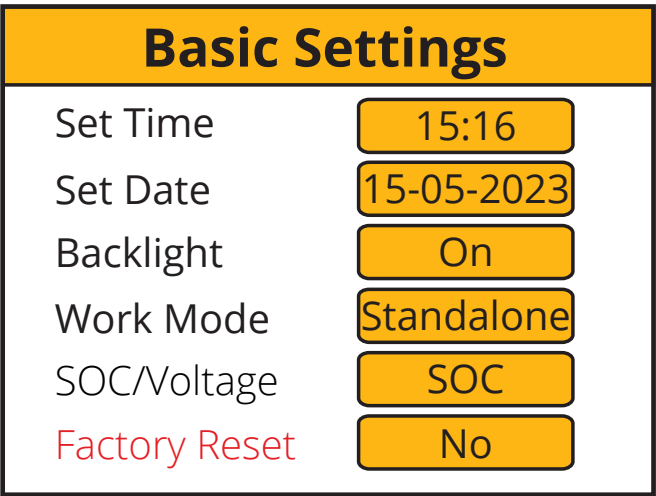


Then select the grid mode according to your region by swiping right.

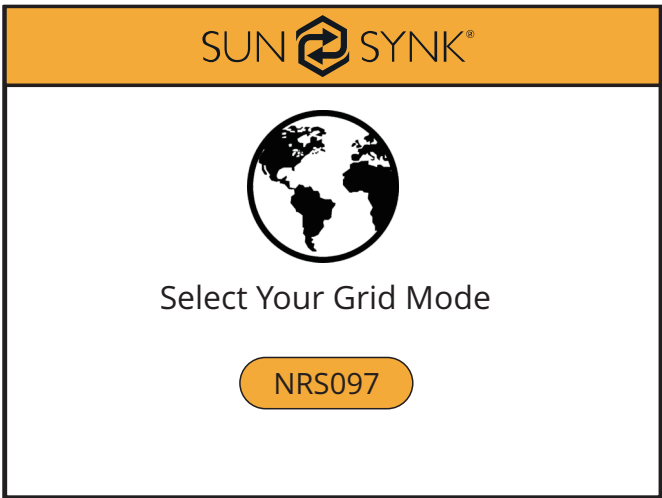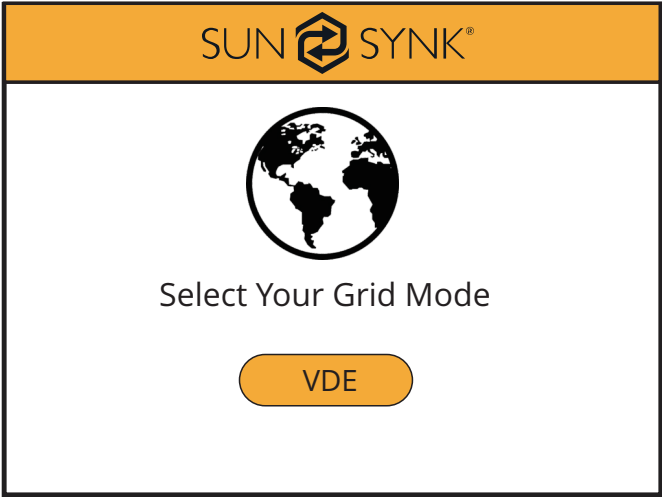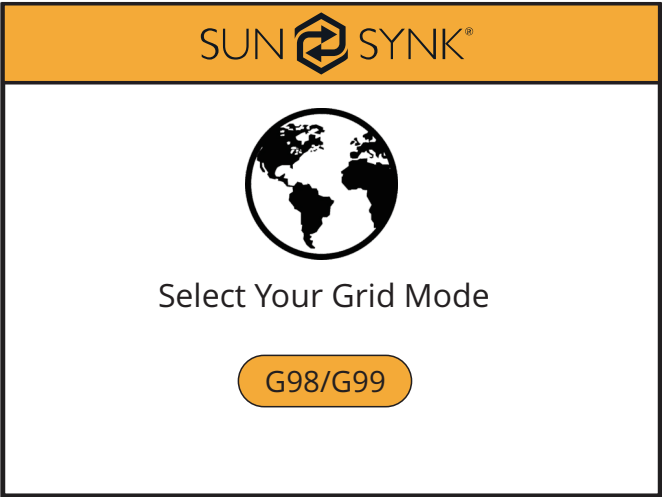

Work Mode Settings

Change the work mode settings via the "Basic Settings" page by pressing the "Work Mode" button. Then a password input page will be shown. The default password is "1234".

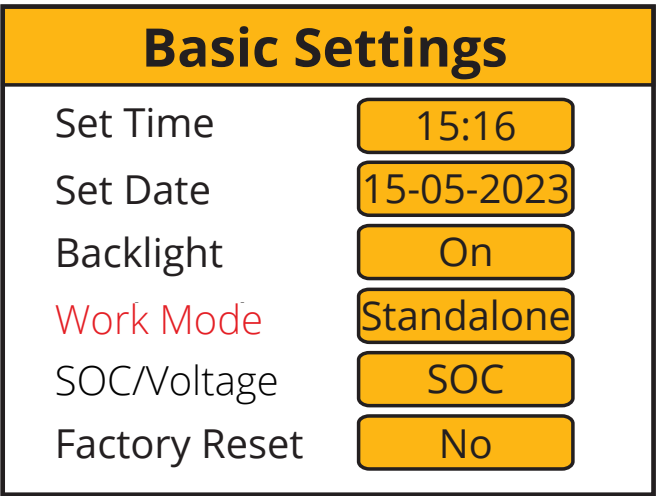

Then, the "Work Mode Settings" page will display.

Work Mode Settings

Standalone

Single-Phase Master

Single-Phase Slave02

What does this page display?

The Work Mode selected

Single-Phase Master

Single-Phase Slave number

What you can do from this page

Change the number of Slave Inverters (maximum 15 slaves)

System Logger

System Logger





Solar Production

Grid Production

SN: XXXXXXXXXX  
DEVICE MODEL: SM3.6KWLL  
DEVICE POWER: 3.6KW  
MAIN VERSION: VX.X-XXXX  
LCD VERSION: VX.X-XXXX

Solar Production

Daily Power

1KWh

Monthly Power

30KWh

Year Power

3600KWh

Total Power

7200KWh

Grid Production

Daily Power

1KWh

Monthly Power

30KWh

Year Power

3600KWh

Total Power

7200KWh

What does this page display?

Solar production icon

Grid production icon

### What you can do from this page

Daily solar power produced

Monthly solar power produced

Yearly solar power produced

Total solar power produced


Daily grid power used

Monthly grid power used

Yearly grid power used

Total grid power produced

## Advance Settings

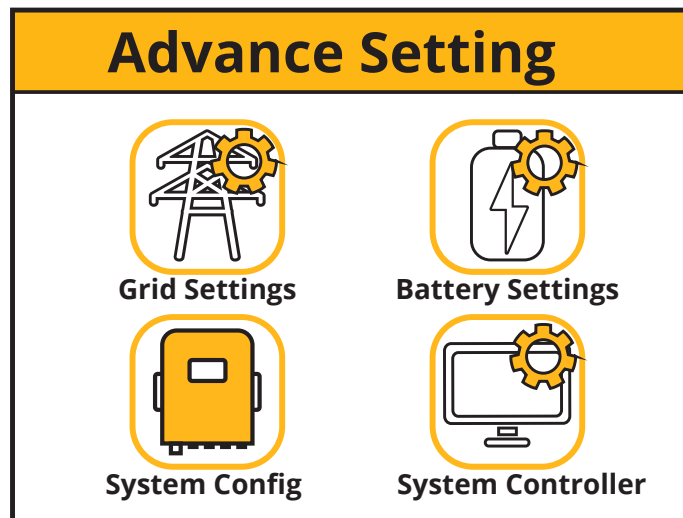

### What does this page display?

Grid Settings page icon

System Configuration page icon

System Controller page icon

Battery Settings page icon

### What you can do from this page

You can access the grid, system, inverter, and battery setting pages.

## Grid Settings

| Grid Settings |         |
|---------------|---------|
| Grid Mode     | G98/G99 |
| Max Grid Volt | 253V    |
| Min Grid Volt | 195.5V  |
| Min Grid Freq | 47.5Hz  |
| Max Grid Freq | 52.0Hz  |
| Voltage       | AC 230V |
| Frequency     | 50Hz    |

### What does this page display?

Grid Mode

Maximum grid voltage allowed

Minimum grid voltage allowed

Maximum grid frequency

Minimum grid frequency

## Battery Settings

| Battery Settings    |       |
|---------------------|-------|
| Low Battery Cut Off | 10%   |
| Reboot Battery      | 20%   |
| Max Charge Current  | 40A   |
| Charge from AC      | Yes   |
| Low Battery         | 15%   |
| Float Charge        | 56.0V |

| Battery Settings    |       |
|---------------------|-------|
| Low Battery Cut Off | 45.0V |
| Reboot Battery      | 50.0V |
| Max Charge Current  | 40.0A |
| Charge from AC      | Yes   |
| Low Battery         | 49.0V |
| Float Charge        | 56.0V |

### What does this page display?

Low battery Cut Off SOC/Voltage

Reboot SOC/Voltage

Maximum charge current

Charge from the mains

Low Battery SOC/Voltage

Float charge SOC/Voltage

### What you can do from this page

Set a *low voltage* cut-off for the batteries. Before setting this, please refer to the battery characteristics.

The *reboot voltage* is the voltage that the batteries must reach before the inverter switches on again.

*Maximum charge* is the maximum current that the system will provide to charge the batteries. This is normally rated at 0.5C, the battery's Ah (s) x 0.5. For example, if you have installed a 20Ah battery, then the maximum charge current should be set at 10A. The lower the setting, the longer the batteries will last.

If *charge from the mains* is set as *YES* the batteries will charge from the mains grid.

*Float charge voltage* must be set accordingly to the specifications of the battery used.

Set the Low Battery Voltage to set the point where Low power mode will take affect.

## PLEASE NOTE

If the Charge from AC is set to No, the battery cannot be charged from AC GRID. Otherwise, the battery can be charged from AC GRID.

## System Settings

| System Config         |             |
|-----------------------|-------------|
| Max Discharge Current | 70A         |
| Max Battery Voltage   | 56.0V       |
| Import Trickle Feed   | 030W        |
| Export Control        | Zero Export |
| Earth Neutral Bond    | Enable      |
| Night Power Saving    | Enable      |

### What does this page display?

Maximum discharge current

Maximum battery voltage

Input power to prevent export

Export Control

Earth bonding

Night Power Saving

### What you can do from this page

Set the maximum discharge current from the batteries.

Set the maximum voltage the batteries should be charged to.

Set the "Import Trickle Feed" from GRID, minimum 20W.

Set the "Export Control". Could be "UPS", "Zero Export" or "Sell".

If Earth Neutral Bond is enabled, the relay will make and earth neutral bond on the load port of the inverter after the grid power fails. This is for earth leakage devices to function correctly on this island circuit.

The Night Power Saving can be set to "Enable" or "Disable".

## Export Control

The Export Control can be set as "UPS", "Zero Export" and "Sell".

### 1. "UPS"

When the "Export Control" is set to "UPS", the inverter will not export power to the home load via the "GRID" connector, just power the essential load that is connected to the "LOAD" connector. When the "Charge from AC" is set to "Yes", the inverter can be charged from the main AC and PV, and the charge time period can be set via the "System Controller" page.

In the "System Controller" page, when the "charge" option is set to "N", the inverter will not be charged by the main AC from "Start Time" to "Stop Time" in this time period. When the "Charge" option is set to "Y", the inverter will be charged by the main AC from "Start Time" to "Stop Time" to "Vol" setting value in this time period.

### 2. "Zero Export"

When the "Export Control" is set to "Zero Export", the inverter will export power to the home load via the "GRID" connector and power the essential load that connected to the "LOAD" connector at the same time. The export power to the home load will not exceed the total power of the home load, so there is no exceeded power feed out, this is called "Zero Export". A CT (Limit) must be connected to the inverter in this work mode.



### 3. "Sell"

When the "Export Control" is set to "Sell", the inverter will sell back any excess power produced by the solar panels to the grid. The power selling time and power settings are determined by "System Controller".

## Export Sell to Grid

1. Press the Settings button on the main screen.

2. Select Advanced Settings.

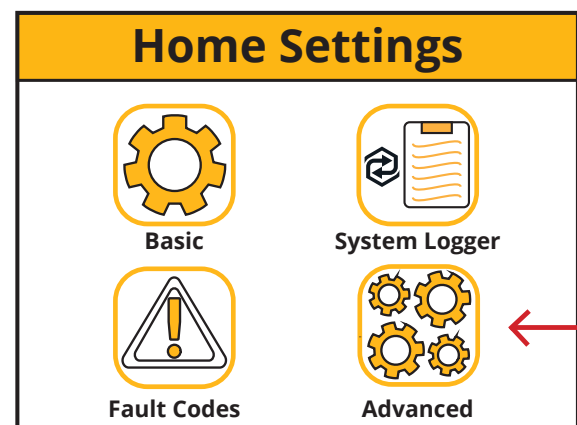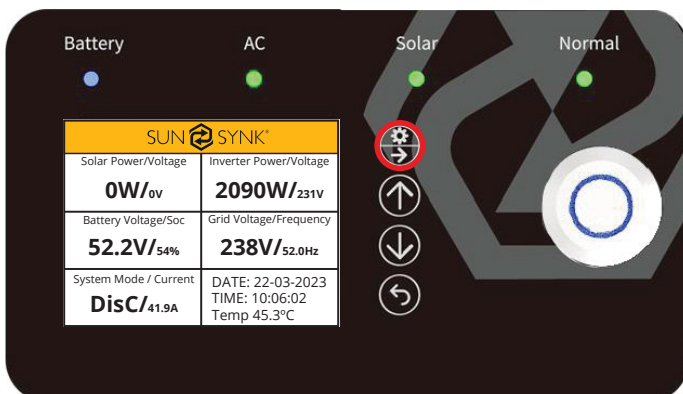

3. Select "System Config". In the "Export Control" option, you can select the "UPS", "Zero Export" and "Sell". If you want to sell electricity, choose "Sell".

### Advance Setting



Grid Settings



Battery Settings



System Config



System Controller

### System Config

|                       |        |
|-----------------------|--------|
| Max Discharge Current | 70A    |
| Max Battery Voltage   | 56.0V  |
| Import Trickle Feed   | 030W   |
| Export Control        | UPS    |
| Earth Neutral Bond    | Enable |
| Night Power Saving    | Enable |

### System Config

|                       |             |
|-----------------------|-------------|
| Max Discharge Current | 70A         |
| Max Battery Voltage   | 56.0V       |
| Import Trickle Feed   | 030W        |
| Export Control        | Zero Export |
| Earth Neutral Bond    | Enable      |
| Night Power Saving    | Enable      |

### System Config

|                       |        |
|-----------------------|--------|
| Max Discharge Current | 70A    |
| Max Battery Voltage   | 56.0V  |
| Import Trickle Feed   | 030W   |
| Export Control        | Sell   |
| Earth Neutral Bond    | Enable |
| Night Power Saving    | Enable |

Which operating mode the machine is working in is shown in the following screens:

#### SUN SYNK

|                                                                                                                                     |            |
|-------------------------------------------------------------------------------------------------------------------------------------|------------|
| CT Power                                                                                                                            | Load Power |
| 0W                                                                                                                                  | 0W         |
| Work Mode: Standalone<br>Input Trickle Feed: 30W<br>Export Control: UPS<br>Earth Neutral Bond: Enable<br>Night Power Saving: Enable |            |

#### SUN SYNK

|                                                                                                                                             |            |
|---------------------------------------------------------------------------------------------------------------------------------------------|------------|
| CT Power                                                                                                                                    | Load Power |
| 0W                                                                                                                                          | 0W         |
| Work Mode: Standalone<br>Input Trickle Feed: 30W<br>Export Control: Zero Export<br>Earth Neutral Bond: Enable<br>Night Power Saving: Enable |            |

#### SUN SYNK

|                                                                                                                                      |            |
|--------------------------------------------------------------------------------------------------------------------------------------|------------|
| CT Power                                                                                                                             | Load Power |
| 0W                                                                                                                                   | 0W         |
| Work Mode: Standalone<br>Input Trickle Feed: 30W<br>Export Control: Sell<br>Earth Neutral Bond: Enable<br>Night Power Saving: Enable |            |

The power selling time and power settings are determined by the setting screen below.

| System Controller |            |           |       |                  |
|-------------------|------------|-----------|-------|------------------|
|                   | Time Start | Time Stop | Power | %/Voltage Charge |
| 1                 | 00:00      | 06:00     | 2000W | 52.0V Y          |
| 2                 | 06:00      | 12:00     | 2000W | 52.0V Y          |
| 3                 | 12:00      | 18:00     | 2000W | 52.0V Y          |
| 4                 | 18:00      | 23:59     | 2000W | 52.0V Y          |

PLEASE NOTE

This feature enables users to regulate the amount of power sold from the stored power in the pack. Any surplus power generated by the PV system, exceeding a predefined voltage or State of Charge (SOC), is automatically directed and sold to the grid.

Charge from AC

When the "Charge from AC" option is set to "Yes," the inverter can be charged by both the main AC and PV. Conversely, setting it to "No" restricts charging solely to PV, disabling charging from the main AC source.

Charge from AC

Yes

Charge from AC

No

When the "Charge from AC" setting is configured to "Yes," the inverter can receive charge from both the main AC and PV sources. Additionally, users can define the charging time period through the "System Controller" page.

Within the "System Controller" page, when the "charge" option is set to "N," the inverter will not accept charge from the main AC during the specified time period, ranging from the "Start Time" to the "Stop Time." Conversely, when the "Charge" option is set to "Y," the inverter will charge from the main AC within the designated time period, extending from the "Start Time" to the "Stop Time," until reaching the specified "Vol" setting value.

Earth Neutral Bond

When the Earth Neutral Bond is set to "Enable," it ensures that the earth is connected to the GRID earth whenever the GRID has power. Conversely, setting it to "Disable" renders this function unavailable.

Earth Neutral Bond

Enable

Earth Neutral Bond

Disable

## Night Power Saving

When the Night Power Saving mode is set to "Enable," the function becomes accessible and operational. Conversely, setting it to "Disable" renders the function unavailable.

### PLEASE NOTE

**The "Night Power Saving" function is only operable when the "Charge from AC" setting is configured to "No" and there is no PV power input detected.**

The Night Power Saving working mode is described as follow:

1. First, you need set the "Low Battery Voltage" value at the "Battery Settings" page of the LCD display.
2. Then you need to set the "Night Power Saving" time periods and the value of "Vol" on the "System Controller" page.

There are 4 time periods, the inverter will discharge the battery until its voltage matches the specified value set at the "Vol" section. If the values set are lower than the "Low Battery Voltage" threshold, once the battery voltage reaches this level, the inverter will cease its DC to DC conversion. Consequently, only the essential load connected to the "LOAD" connector will be powered by the main AC. Since the primary standby power consumption of the inverter stems from its DC to DC conversion, discontinuing this process significantly reduces standby power consumption, leading to substantial energy savings.

### PLEASE NOTE

**Please note that during the "Night Power Saving" mode, when the main AC is inactive, the transition time for the UPS function will be extended. Instead of an immediate shift, it will take approximately 30 seconds.**

However, when PV power input is detected, the inverter's DC to DC conversion will resume operation. This is essential for recharging the battery packs, as without this conversion, charging would not be possible.

## Setting Details

### 1. UPS Mode

When this mode function is enabled, the inverter's output is solely directed to the load and will not export any power to the GRID, even if it remains connected. To activate this mode, ensure that the "Charge from AC" setting is configured to "Yes" and the Export Control is set to "UPS".

| Battery Settings    |       |
|---------------------|-------|
| Low Battery Cut Off | 45.0V |
| Reboot Battery      | 50.0V |
| Max Charge Current  | 40.0A |
| Charge from AC      | Yes   |
| Low Battery         | 49.0V |
| Float Charge        | 56.0V |

| System Config         |        |
|-----------------------|--------|
| Max Discharge Current | 70A    |
| Max Battery Voltage   | 56.0V  |
| Import Trickle Feed   | 030W   |
| Export Control        | UPS    |
| Earth Neutral Bond    | Enable |
| Night Power Saving    | Enable |

Configure the duration for charging the battery to a specific voltage percentage. In instances where the PV system is disconnected, it's recommended to set the voltage percentage to 56V and designate all time ranges as "Y" (Yes). Determine the start time for charging the battery by selecting either "Y" (Yes) or "N" (No).

| System Controller |            |           |       |                  |
|-------------------|------------|-----------|-------|------------------|
|                   | Time Start | Time Stop | Power | %/Voltage Charge |
| 1                 | 00:00      | 06:00     | 2000W | 100% Y           |
| 2                 | 06:00      | 12:00     | 2000W | 100% Y           |
| 3                 | 12:00      | 18:00     | 2000W | 100% Y           |
| 4                 | 18:00      | 23:59     | 2000W | 100% Y           |

2. Zero Export Mode

This mode function enables the inverter to simultaneously export power to the home load through the “GRID” connector and power essential loads connected to the “LOAD” connector. When the zero export feature is activated, the inverter exports energy to the grid. However, the maximum power exported will not surpass the total power consumption of the grid’s load.

| Battery Settings    |       |
|---------------------|-------|
| Low Battery Cut Off | 45.0V |
| Reboot Battery      | 50.0V |
| Max Charge Current  | 40.0A |
| Charge from AC      | Yes   |
| Low Battery         | 49.0V |
| Float Charge        | 56.0V |

| System Config         |             |
|-----------------------|-------------|
| Max Discharge Current | 70A         |
| Max Battery Voltage   | 56.0V       |
| Import Trickle Feed   | 030W        |
| Export Control        | Zero Export |
| Earth Neutral Bond    | Enable      |
| Night Power Saving    | Enable      |

| System Controller |            |           |       |                  |
|-------------------|------------|-----------|-------|------------------|
|                   | Time Start | Time Stop | Power | %/Voltage Charge |
| 1                 | 00:00      | 06:00     | 2000W | 52.0V Y          |
| 2                 | 06:00      | 12:00     | 2000W | 52.0V Y          |
| 3                 | 12:00      | 18:00     | 2000W | 52.0V Y          |
| 4                 | 18:00      | 23:59     | 2000W | 52.0V Y          |

3. Night Power Saving

In the absence of PV input and when the battery is not being charged from AC, the inverter will supply power to the load directly from the battery. If the battery level reaches the preset value specified in the system control during that time period, and it is configured as “Y,” the inverter will operate at a reduced power level from the grid to ensure the battery level does not drop to a level that triggers inverter shutdown. During this time, the load power consumption will be sourced from the grid. The settings for this operation are as follows:

Battery Settings

Low Battery Cut Off

45.0V

Reboot Battery

50.0V

Max Charge Current

40.0A

Charge from AC

No

Low Battery

47.0V

Float Charge

56.0V

System Config

Max Discharge Current

70A

Max Battery Voltage

56.0V

Import Trickle Feed

030W

Export Control

Export

Earth Neutral Bond

Enable

Night Power Saving

Enable


System Controller

|   | Time Start | Time Stop | Power | %/Voltage | Charge |
|---|------------|-----------|-------|-----------|--------|
| 1 | 00:00      | 06:00     | 2000W | 47V       | Y      |
| 2 | 06:00      | 12:00     | 2000W | 47V       | Y      |
| 3 | 12:00      | 18:00     | 2000W | 47V       | Y      |
| 4 | 18:00      | 23:59     | 2000W | 47V       | Y      |

If the low battery voltage is set higher, the %voltage will be placed higher accordingly.

## Fault Codes

To access fault codes, simply navigate to the Home Settings menu and click on the Fault Codes icon.

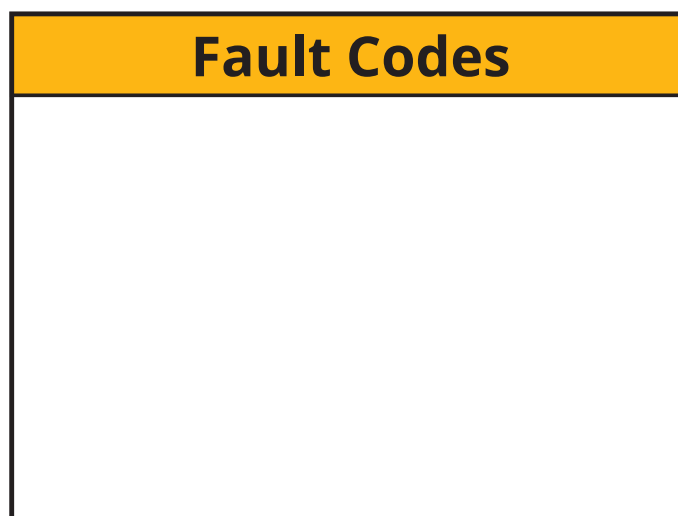

If any of the fault messages listed in the following table appear on your inverter and persist after restarting, please contact your local vendor or service center. Ensure to provide the following information:

1. Inverter serial number.
2. Distributor or service center of the inverter.
3. On-grid power generation date.
4. A detailed problem description, including the fault code and indicator status displayed on the LCD.
5. Your contact information.

| Error Code | Description                                  | Potential Method for Measurement and Fix                                                                                                                                                                                                                                             |
|------------|----------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| F07        | <b>DC/DC_Softstart_Fault</b>                 | 1. Startup problems, replace the control board, if not, remove the motherboard to measure the MOS tube is in good condition.                                                                                                                                                         |
| F10        | <b>AuxPowerBoard_Failure</b>                 | 1. Power supply failure, update power board.                                                                                                                                                                                                                                         |
| F13        | <b>Working mode change</b>                   | <b>Inverter work mode changed:</b><br>1. Reset the inverter.<br>2. Seek help from Sunsynk Mobile.                                                                                                                                                                                    |
| F15        | <b>Short circuit protecting</b>              | <b>Short circuit fault:</b><br>1. Maintain the connection.<br>2. Proceed to the settings to modify the work mode.<br>3. Wait approximately 3-4 minutes.<br>4. The device should return to its normal working condition, with the error cleared.<br>5. Seek help from Sunsynk Mobile. |
| F18        | <b>AC over current fault or hardware</b>     | <b>AC slide over current fault:</b><br>1. Check if the backup load power is within the range of the inverter.<br>2. Restart and check if it is normal.                                                                                                                               |
| F20        | <b>DC over current fault of the hardware</b> | <b>DC over current fault:</b><br>1. Check PV module and battery connections.<br>2. Reset the system.                                                                                                                                                                                 |

| Error Code | Display Error                                   | Potential Method for Measurement and Fix                                                                                                                                                                                                                                                                                        |
|------------|-------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| F23        | <b>AC leakage current is trans over current</b> | <b>Leakage current fault:</b><br>1. Check the PV module and inverter cables.<br>2. You may have a faulty PV panel (earth short).<br>3. Restart inverter.                                                                                                                                                                        |
| F24        | <b>DC insulation impedance failure</b>          | <b>PV isolation resistance is too low:</b><br>1. Check if the connection of PV panels and inverter are firmly connected.<br>2. Check if the earth bond cable on inverters is connected to the ground.                                                                                                                           |
| F26        | <b>The bus bar is unbalanced</b>                | 1. Please wait 5 minutes to see if it returns to normal.<br>2. Fully reset the inverter.                                                                                                                                                                                                                                        |
| F29        | <b>ECAN communicate</b>                         | 1. When in parallel mode, check the parallel communication cable connection and hybrid communication address settings.<br>2. During the parallel system startup period, inverters will report F29. When all inverters are in ON status, it will disappear automatically;<br>3. If the fault exists, please contact us for help. |
| F30        | <b>Load current exceeding</b>                   | 1. Try to reduce the load power.<br>2. Seek help from Sunsynk Mobile.                                                                                                                                                                                                                                                           |
| F34        | <b>Over Load Protection</b>                     | 1. Reduce appliance power on LOAD side (system will auto-reboot in 2 minutes).                                                                                                                                                                                                                                                  |
| F35        | <b>No AC grid</b>                               | 1. Check if the inverter's connected to the <b>AC grid</b> .<br>2. Check if the RSCD had not tripped.<br>3. Check if the switch and fuses between the inverter and grid are all switched on.                                                                                                                                    |
| F37        | <b>Battery activation overcurrent</b>           | 1. System will auto-reboot in 2 minutes.                                                                                                                                                                                                                                                                                        |
| F39        | <b>DC-DC over current</b>                       | 1. Push the power button of the inverter to restart it, system will auto-reboot in 2 minutes.                                                                                                                                                                                                                                   |
| F40        | <b>DC over current</b>                          | 1. If the battery SOC shows 0, turn off the unit and restart it                                                                                                                                                                                                                                                                 |
| F41        | <b>Parallel system stop</b>                     | 1. Check the hybrid inverter working status. If there's 1pcs hybrid inverter is in OFF status, the other hybrid inverters may report F41 fault in parallel system.<br>2. If the fault exists, please contact us for help.                                                                                                       |
| F42        | <b>AC line low voltage</b>                      | <b>Grid voltage fault:</b><br>1. Check if the voltage is in the range of standard voltage in specification, this can be adjusted via the grid set up page.<br>2. Check if grid cables are correctly connected.                                                                                                                  |
| F45        | <b>AC line HIGH voltage</b>                     | 1. Grid exceeds 251V, and the inverter switch is off<br>2. Grid exceeds 251V, and the inverter switch is on, but the battery is drained                                                                                                                                                                                         |
| F47        | <b>AC over frequency</b>                        | <b>Grid voltage fault:</b><br>1. Check if the voltage is in the range of standard voltage in specification, this can be adjusted via the grid set up page.<br>2. Check if grid cables are correctly connected.                                                                                                                  |

| Error Code | Display Error                             | Potential Method for Measurement and Fix                                                                                                                                                                                                                                                                                                                                         |
|------------|-------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| F48        | <b>AC lower frequency</b>                 | <b>Grid frequency out of range:</b><br>1. Check if the frequency is in the range of specification.<br>2. You may need to adjust the frequency on the grid set up page.                                                                                                                                                                                                           |
| F55        | <b>DC busbar voltage is high</b>          | User: External Battery Input voltage is high<br>1. Installer: check inverter's bus voltage might be too high. Observe the battery voltage value on the LCD (the value will be restored automatically if it is normal), if it is not normal for a long period, you have to check the control board or the voltage acquisition part of the motherboard.                            |
| F56        | <b>DC bus bar voltage is too low</b>      | <b>Battery low voltage:</b><br>1. Check if the battery voltage is too low.<br>2. If the battery voltage is too low use the PV or grid to charge the battery.<br>3. Check the battery BMS.<br><b>Important:</b> Especially with lithium batteries, ensure that the batteries Max. discharge current or power specification is the same or higher than the inverter specification. |
| F60        | <b>Smoke alarm</b>                        | When the smoke alarm is lifted, use the App to restart the inverter (Refer to the relevant content of the App user manual).                                                                                                                                                                                                                                                      |
| F61        | <b>Bus one shutdown</b>                   | 1. Reset the inverter.<br>2. Seek help from Sunsynk Mobile.                                                                                                                                                                                                                                                                                                                      |
| F62        | <b>DRMs0 stop</b>                         | Reserved Error code                                                                                                                                                                                                                                                                                                                                                              |
| F63        | <b>FAN Error</b>                          | 1. A technician needs to check the internal fan wire or replace fan.<br>2. Seek help from Sunsynk Mobile.                                                                                                                                                                                                                                                                        |
| F64        | <b>Heat sink high-temperature failure</b> | <b>Heat sink temperature is too high:</b><br>1. Check if the working environment temperature is too high.<br>2. Turn off the inverter for 30 minutes and restart.                                                                                                                                                                                                                |

## COMMISSIONING

### Startup / Shutdown Procedure

The installation of the inverter should be carried out by a qualified or licensed electrical engineer, adhering to the wiring regulations of the country. Before powering on the inverter, the engineer must conduct the following tests: earth bond, RCD, and earth leakage tests. Additionally, they should verify that the solar panel Voc voltage does not exceed 450V and check the battery voltage.

Once these tests are completed satisfactorily, the following power-on sequence should be followed:

1. Turn on the battery breaker.
2. Set the start button to the "on" position.
3. Turn on the AC power.
4. Turn on the DC (PV isolator).

For shutdown, follow this sequence:

1. Turn off the PV isolator.
2. Turn off the AC power.
3. Set the start button to the "off" position.
4. Turn off the battery isolator.

## Information for Commissioning the Inverter

Once the inverter is successfully powered up, it must be programmed and configured according to the programming features provided above.

|                                                                                     |                                                                                                                 |                                                                                                                                         |                                                           |
|-------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------|
|    | Check the <i>earth bond</i> on the solar panels.                                                                | Check the Voc does not exceed 450V.                                                                                                     | Ensure both MPPTs are balanced.                           |
|   | Measure the supply voltage, check it matches the settings of the inverter.                                      | If it falls out of the setting range it will cause the inverter to shut down and alarm.                                                 | See grid set up page.                                     |
|  | Check the battery charge and discharge is within the C rating of the battery. Too high will damage the battery. |                                                                                                                                         | Check the battery BMS is communicating with the inverter. |
|  | This is the heart of the system, this controller everything.                                                    | Ensure you are familiar with this, if you fully understand the controller you will fully appreciate the capabilities of there inverter. |                                                           |
|  | Familiarise yourself with common fault codes.                                                                   |                                                                                                                                         |                                                           |

## GFDI Fault

Before the inverter initiates grid connection, it will conduct impedance checks between PV+ and ground, as well as PV- and ground. If either of these impedance values is less than 33k, the inverter will refrain from connecting to the grid and will display error code F24 on its LCD screen.

## MAINTENANCE

The inverter is designed to require minimal maintenance. However, it's crucial to ensure its optimal performance. We recommend performing the following tasks at least twice a year (for environments prone to dust, weekly maintenance may be necessary):

1. Clean all cooling fans and air ducts to ensure they are free from dust and debris.
2. Verify that there are no fault codes displayed, and ensure proper communication with lithium batteries.

Additionally, for weekly maintenance in areas prone to micro insect accumulation, consider using micro-mesh filters as an available option to prevent clogging and ensure uninterrupted operation.

## APPENDIX A

When utilizing an external residual current device (RCD), it's essential to select a device type (A/AC, etc.) with a tripping current of 30mA or higher.

### Use of RCDs

Residual Current Devices (RCDs): An RCD designated for an IES (Inverter Energy System) can be employed to fulfill the mechanical cable protection criteria and isolation requirements outlined in BS 7671 for the cable running from the switchboard to the IES.

1. Disconnect all live conductors (including the actives and neutral).
2. Be of the type specified in the inverter manufacturer's instructions or as labelled on the inverter.

We strongly advise using an RCD on all circuits and sub-circuits connected to the Sunsynk Mobile inverter. Specifically, we recommend utilizing a Residual Current Breaker with Overcurrent Protection (RCBO) for enhanced safety and protection.

|                                            |               |
|--------------------------------------------|---------------|
| <b>Earth-leakage protection class</b>      | Type A        |
| <b>Earth-leakage sensitivity</b>           | 30mA          |
| <b>Curve code</b>                          | C             |
| <b>Network type</b>                        | AC            |
| <b>Poles description</b>                   | 2P            |
| <b>Earth-leakage protection time delay</b> | Instantaneous |

For more information, training videos, software upgrades, help line or forum please refer to <http://www.sunsynkmobile.com> - Tech Support (Do not forget to register first on the website).



## CONTACT US

**Email Us:** [sales@sunsynkmobile.com](mailto:sales@sunsynkmobile.com) **Website:** [www.sunsynkmobile.com](http://www.sunsynkmobile.com)

**VAT Number:** 175669460

**Address UK:** Sunsynk UK Ltd. 17 Turnstone Business Park,  
Mulberry Avenue, Widnes, Cheshire, WA8 0WN

**Address EU:** Sunsynk NL. Henri Wijnmalenweg 8, Eindhoven,  
Netherlands, 5657 EP

**Call Us:** +44 151 832 4300